

## General Regulations for Ordering Electrical Connections

### Regulations

The electrical installations are subject to the Swiss legislation (EIG and NIV) as well as to SEV regulations (SN SEV NIN 2005).

Energy consumption of up to and including 32A must connect to an FI safety switch (In=30mA).

### Note on Safety

For the following installations, proof of safety (NIV Art. 37) must be provided to MCH Swiss Exhibition (Basel) Ltd. (hereinafter referred to as "MCH") before the exhibition starts:

- Electrical distributors
- Plugged connections with more than 32A
- Installations with fixed connections to distributors

See order form "Safety certificates electrical" (4 S-SN).

Security certificates deposited less than 4 days before the exhibition will be reissued and invoiced.

### Voltage

Mains voltage, 3x400V/230V 50Hz (24 hrs). For other operating voltages, exhibitors must provide their own transformers.

### Sockets

MCH only supplies sockets in a fuse box and fitted to the main connection.

From the main connection onwards, the stand installation can be configured independently using extension leads and multiple sockets.

### Connection for Shell Schemes

There are separate order forms for our shell scheme.

### Express Surcharge

Orders received on the first day of stand construction or later are subject to an additional charge of CHF 300.-.

### Contravention/Liability

Exhibitors are not permitted to install their own connections. In case of faulty installations, MCH reserves the right to block these connections. The exhibitor is liable for damage and any disturbances that arise from the failure to observe the General Regulations of the Exhibition, the general regulations pertaining to this form or the instructions given by Exhibition employees.

### Inquiries

Congress Center Basel|MCH Swiss Exhibition (Basel) Ltd.  
Fax: +41 58 206 21 85  
e-mail: [exhibition@congress.ch](mailto:exhibition@congress.ch)